


WHERE TO SET OUT YOUR BLOCKING FOR HANDRAILS



- Understanding the requirements your stairs will need to meet

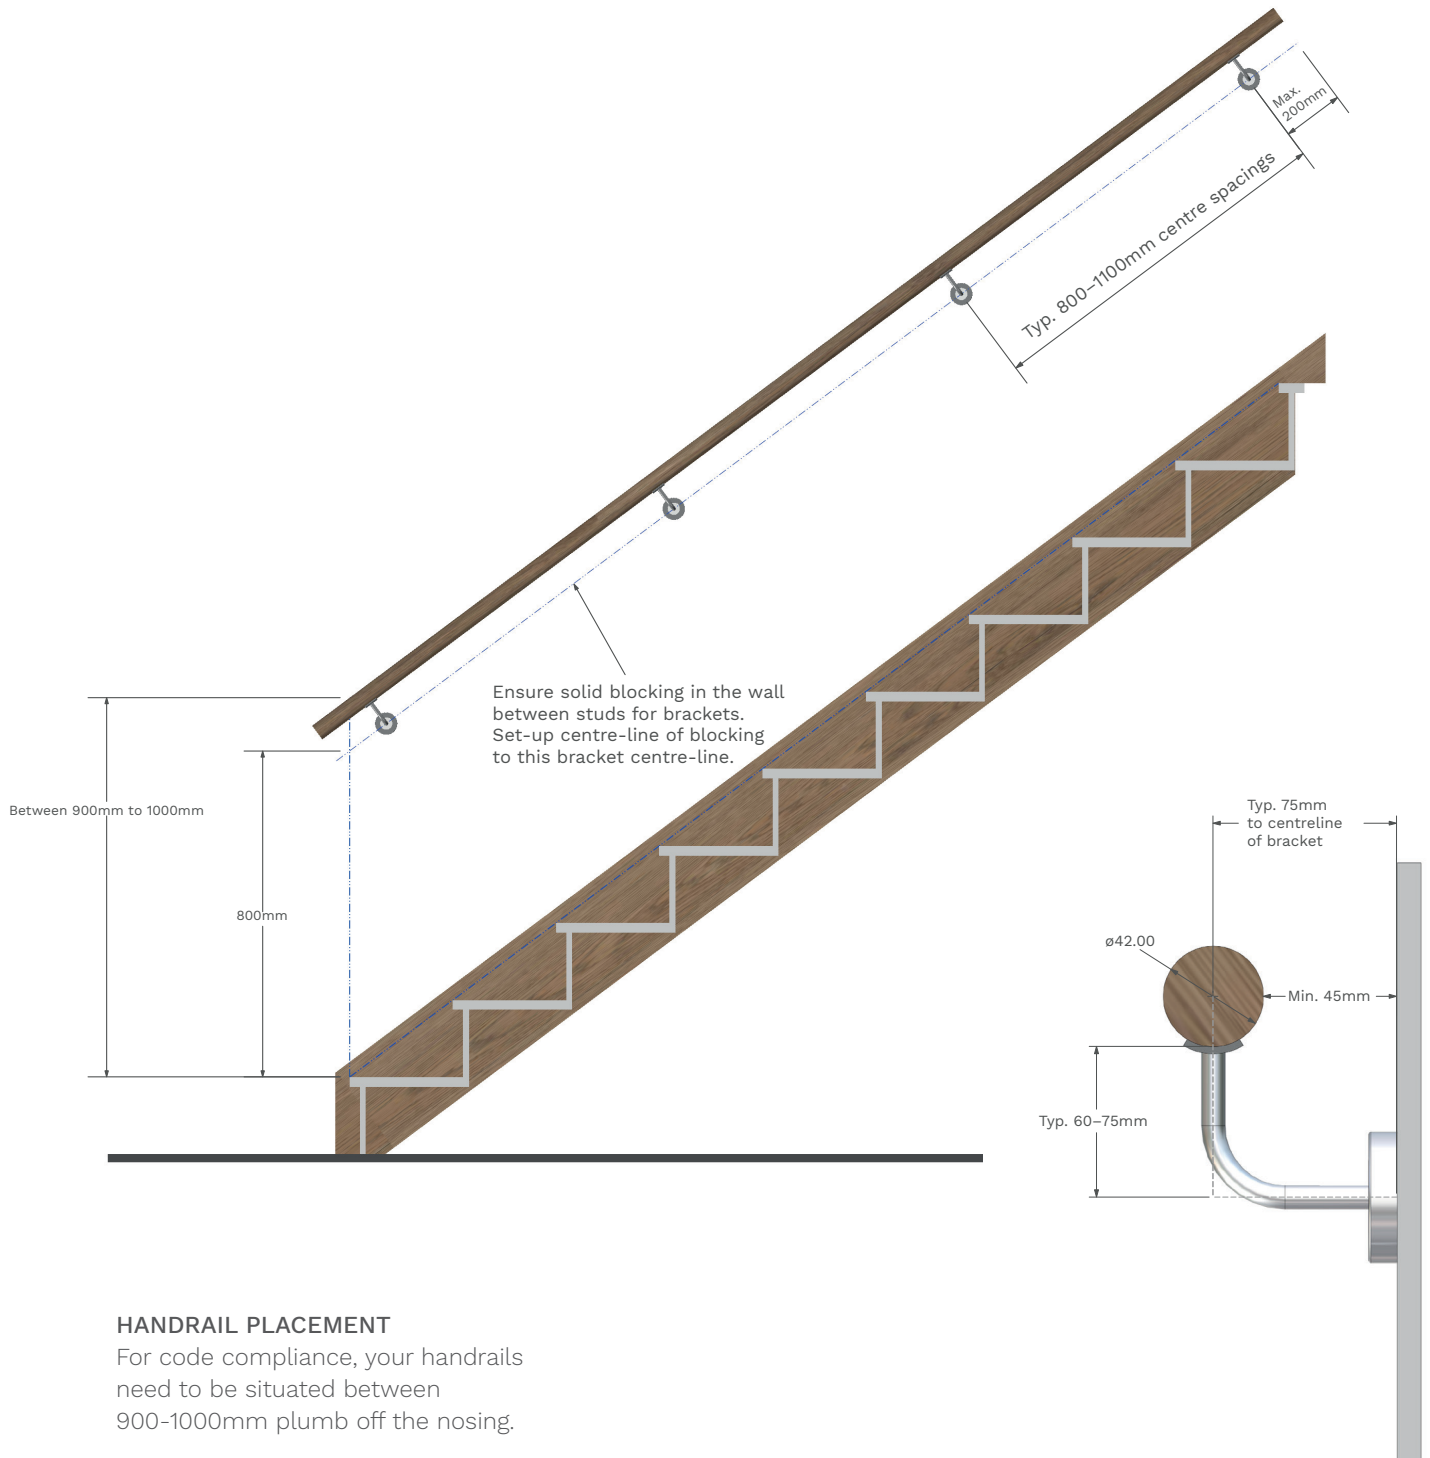

HANDRAIL PLACEMENT

For code compliance, your handrails need to be situated between 900-1000mm plumb off the nosing.

BROWSE OUR LIBRARY
OF COMPLETED PROJECTS AND INSPIRATIONAL DESIGNS AT

— STYLECRAFTSTAIRS.CO.NZ

QUERIES? CALL US

TO SPEAK DIRECTLY WITH ONE OF OUR EXPERIENCED TEAM MEMBERS

☎ 0800 896 500